



Quality and Price to earn your Business, Service to keep it!

1-800-468-9477

www.houstonwire.com

ASSEMBLY INSTRUCTIONS: LOCKING KD-144 SERIES

COMPONENTS:



(1) Front Panel



(1) Rear Panel



(1) Locking Gate Assembly



(2) Side Support



(8) Dome Nut



(8) Elevator Bolt



(2) Support Hook



(1) Locking Gate Clip

NOTE: WHEN ASSEMBLING THE RACK, DO NOT FIRMLY TIGHTEN BOLTS UNTIL THE RACK HAS BEEN LEVELED.

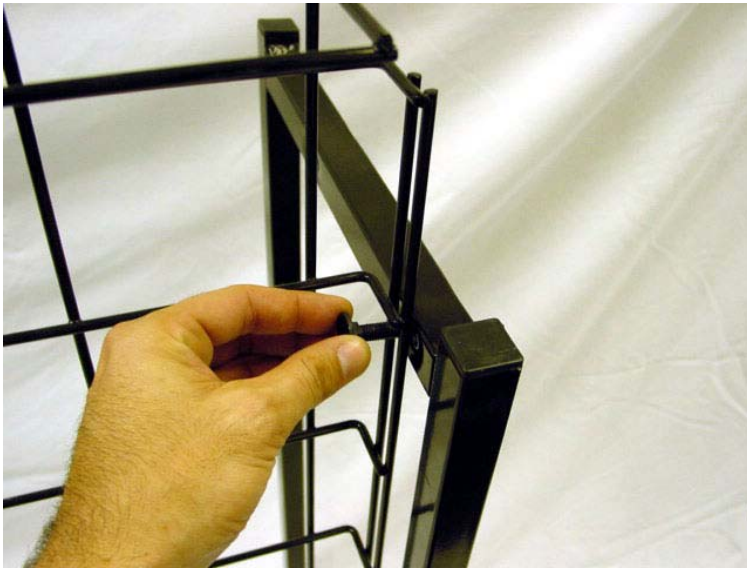


Figure 1



Figure 2

1. Locate the front panel and two side supports.
2. Place an elevator bolt through the side face of the front panel just below the second horizontal wire from the top. (Fig. 1)
3. Make sure the head of the elevator bolt is below the wire as shown. (Fig. 2)

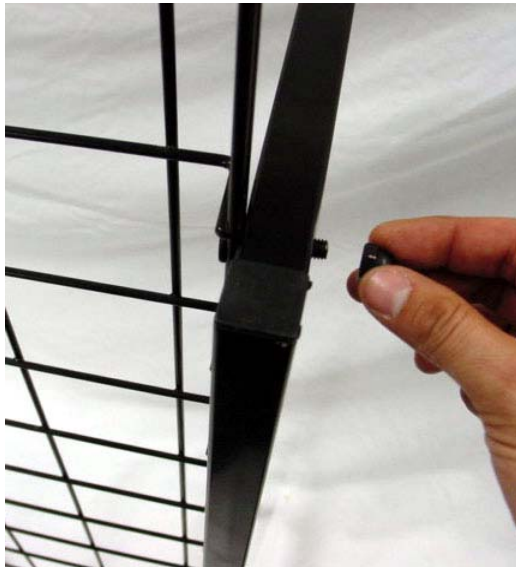


Figure 3



Figure 4

4. Cover the threaded end of the elevator bolt with a dome nut, hand tight. (Fig. 3,4)
5. Repeat this procedure to connect the front panel to the bottom of the side supports for both sides.



Figure 5



Figure 6

6. At this point the rack should look like the photo shown above. (Fig. 5)
7. Locate the rear panel and place an elevator bolt through the side face of the front panel just below the third horizontal wire from the top. (Fig. 6)
8. Attach all four elevator bolts in the same manner as the front panel.



Figure 7

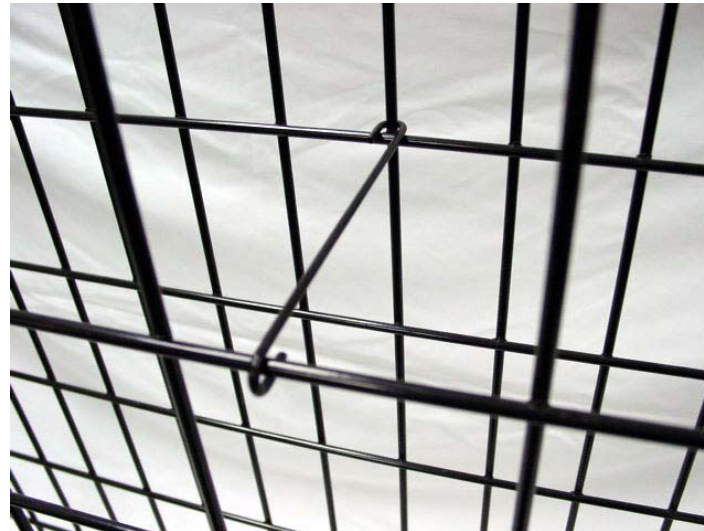


Figure 8

9. After all of the bolts have been inserted and loosely covered with the dome nuts, level the rack on the floor. Once the rack has been leveled, tighten all of the dome nuts.
10. The rack should look like the photo above. (Fig. 7)

11. **IMPORTANT:** The two support hooks must be installed prior to loading the rack. Connect the support hooks from the front panel to the rear panel at the third row from the top on the front and at the fourth row near the middle of the rack as viewed from the front. (Fig. 8)



Figure 9



Figure 10

12. Next locate the locking gate assembly and place top hooks on the top wire of the rear panel as shown. (Fig. 9)

13. Now place the top hinges of the gate assembly to the top wire of the front panel. (Fig. 10)

14. The gate assembly folds down and should be flush with the front of the rack. (Fig. 11)

15. Push both levers toward the middle of the rack to latch the gate assembly. (Fig. 12,13)

16. To lock the wine rack, place padlock (*not included) as shown below. (Fig. 14)



Figure 11



Figure 12



Figure 13



Figure 14



Figure 15



Figure 16



Figure 17

17. To lock the gate in the upright position place the locking gate clip in the middle of the gate as shown in (Fig. 15)

18. Fold the gate up and lock into position as shown in (Fig. 16)

19. This will hold the gate up as shown in (Fig. 17) for easy access to wine bottles.



Note: WHEN PROPERLY ASSEMBLED BOTH THE FRONT AND REAR PANELS WILL SIT APPROXIMATELY 5 INCHES OFF THE FLOOR. MAKE SURE ALL NUTS ARE MAINTAINED IN A TIGHT POSITION. FAILURE TO KEEP THESE TIGHT COULD RESULT IN INJURY, DAMAGE TO THE RACK AND/OR PRODUCTS.